


1) Mount the MAFU control unit



2) Raise the car, remove the driver side wheel and wheel well splash guard:

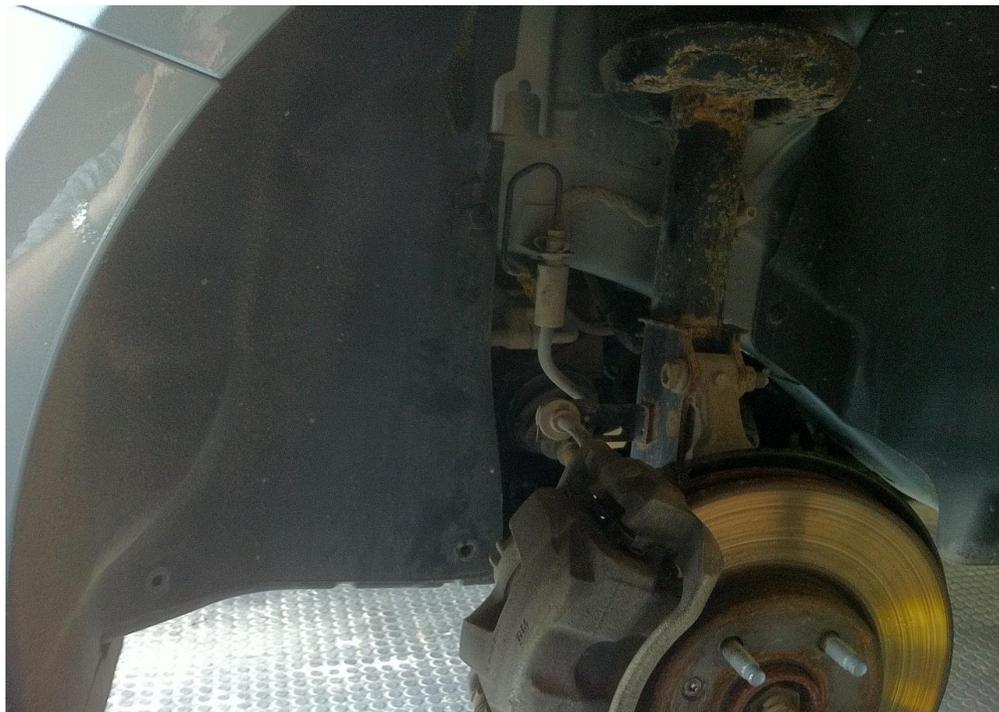

- 3) Mount the pump and tap the windshield reservoir tank. Make sure the inlet to the pump is located lower than the tap location on the reservoir. This is critical as the pump must be gravity fed fluid. The pump is a “push” style pump – it can not pull fluid from the reservoir.



Pump location behind the driver side fog lights. Some cutting may be necessary.



Tap the windshield washer reservoir.



Connect the reservoir to the pump:



Connect the wiring (connect the green/white wire from the mass air flow sensor to the mass airflow

signal wire on the controller):



Tap the intake pipe and install the injector nozzle holder, #2 nozzle, and connect to the pump:

